

INSTALLATION INSTRUCTIONS AIR VENT BEZELS 30004 AIR VENT ASSEMBLY 30003



30004 Air Vent Bezel

Clean the factory bezel with alcohol to remove any residue, Peel the backing from the 3M tape, and place the stainless bezel over the factory bezel and press firmly to secure the overlay.



30003 Air Vent Assembly Eight pieces.

Step 1- Remove the factory air vent assembly from the Jeep by turning the assembly clockwise. Pull the air vent out of the dash. Using a small screwdriver lift the four tabs holding the factory bezel in place. Remove the center airflow director from the housing. Squeeze the housing opposite from the pivot points, and pull the deflector from the housing.

Insert the Stainless airflow director into the housing, and place the housing into the air unit.

Place the Stainless bezel over the housing and align the notch of the bezel with the housing.

Push the bezel into place until the slot locks in place. Re-insert the air vent assembly into the dash by aligning the slots of the housing with the dash. One slot is narrow, the other is larger. Make sure you place the large slot of the housing with the large slot of the dash. Push the assembly and turn counterclockwise until assembly is secure in the dash. Repeat this process for all four-air vent assemblies.

INSTALLATION INSTRUCTIONS AIR VENT BEZELS 30004 AIR VENT ASSEMBLY 30003



30004 Air Vent Bezel

Clean the factory bezel with alcohol to remove any residue, Peel the backing from the 3M tape, and place the stainless bezel over the factory bezel and press firmly to secure the overlay.



30003 Air Vent Assembly Eight pieces.

Step 1- Remove the factory air vent assembly from the Jeep by turning the assembly clockwise. Pull the air vent out of the dash. Using a small screwdriver lift the four tabs holding the factory bezel in place. Remove the center airflow director from the housing. Squeeze the housing opposite from the pivot points, and pull the deflector from the housing.

Insert the Stainless airflow director into the housing, and place the housing into the air unit.

Place the Stainless bezel over the housing and align the notch of the bezel with the housing.

Push the bezel into place until the slot locks in place. Re-insert the air vent assembly into the dash by aligning the slots of the housing with the dash. One slot is narrow, the other is larger. Make sure you place the large slot of the housing with the large slot of the dash. Push the assembly and turn counterclockwise until assembly is secure in the dash. Repeat this process for all four-air vent assemblies.