



INSTALLATION INSTRUCTIONS

PART No. 30528

MODEL No.

Battery Tray TJ



- Remove the Positive and the Negative battery terminals
- Remove the Nuts on the two hold down arms
- Remove the battery from the vehicle
- Disconnect the battery sensor plug, by opening the two tabs on the side of the plug and pulling the plug apart.
- Remove the four hex bolts holding the battery tray in place and remove from your vehicle.
- Place the Stainless battery tray in place and make sure you thread the sensor plug end through the round hole in the tray and reconnect the sensor plug.
- Bolt the tray in place using the stainless bolts provided
- Place the hold down arms in place in the battery tray slots provided
- Place the battery on the tray and install the plastic hold down on the hold down arms and thread the hex nuts on the arm.
- Tighten the hex nuts and make sure battery is secure



INSTALLATION INSTRUCTIONS

PART No. 30528

MODEL No.

Battery Tray TJ



- Remove the Positive and the Negative battery terminals
- Remove the Nuts on the two hold down arms
- Remove the battery from the vehicle
- Disconnect the battery sensor plug, by opening the two tabs on the side of the plug and pulling the plug apart.
- Remove the four hex bolts holding the battery tray in place and remove from your vehicle.
- Place the Stainless battery tray in place and make sure you thread the sensor plug end through the round hole in the tray and reconnect the sensor plug.
- Bolt the tray in place using the stainless bolts provided
- Place the hold down arms in place in the battery tray slots provided
- Place the battery on the tray and install the plastic hold down on the hold down arms and thread the hex nuts on the arm.
- Tighten the hex nuts and make sure battery is secure