

## INSTALLATION INSTRUCTIONS FOR 30594 HOOD PROP ROD

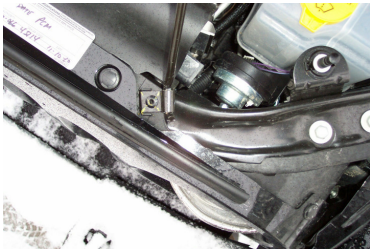


PHOTO 1

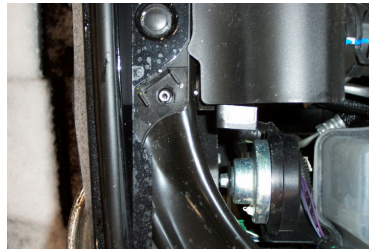


PHOTO 2



PHOTO 3

Lift the hood up and support the hood using a wood 2" x 4" x 3 Ft long or something comparable. Using a 1/4" drill bit, drill down thru the head of the rivet holding the factory prop rod in place. See photo 1 and photo 2.

With the head of the rivet removed use a drift pin to knock the remaining rivet thru the steel bracket. Tap the hole with a 5/16"-18 NC tap.

Position the new Stainless Steel prop rod in place (see photo 3) and secure using the 5/16" bolt and flatwasher provided.

## INSTALLATION INSTRUCTIONS FOR 30594 HOOD PROP ROD



Lift the hood up and support the hood using a wood 2" x 4" x 3 Ft long or something comparable. Using a 1/4" drill bit, drill down thru the head of the rivet holding the factory prop rod in place. See photo 1 and photo 2.

With the head of the rivet removed use a drift pin to knock the remaining rivet thru the steel bracket. Tap the hole with a 5/16"-18 NC tap.

Position the new Stainless Steel prop rod in place (see photo 3) and secure using the 5/16" bolt and flatwasher provided.